

OSURC Rover 2015 Arm Daughterboard Rev. 2 Manual

Nick Ames (nick@fetchmodus.org)

March 14, 2015

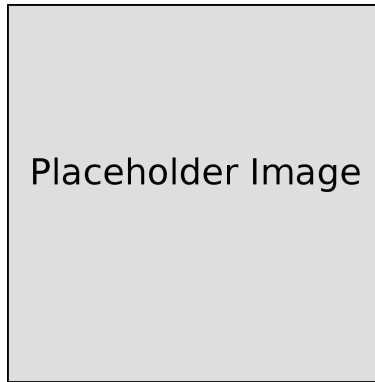


Figure 1: Assembled arm daughterboard

1 General Specifications

This manual covers the arm daughterboard, a component of the electronics of the OSU Robotics Club's 2015 rover. The arm daughterboard holds the stepper drivers for the robot's arm, and provides an interface to the arm's sensors. It includes:

- 5x stepper drivers (Pololu DRV8825 carriers; up to 1.5A per phase)
- 5x limit switch inputs
- 4x interfaces for resistive flex sensors
- A communication interface to the Drive Daughterboard (including the $\overline{\text{PAUSE}}$ signal)

The daughterboard is powered from a nominal 24V supply, using the same connector and pinout as the brainboards. **Power should be connected to the daughterboard.** The brainboard receives power from the daughterboard.

2 Mechanical Dimensions

The Arm Daughterboard is a 3.90" square PCB with four .125" holes spaced on a 3.5" square centered within it. Each hole is surrounded by a .340" diameter circular buffer zone suitable for a standoff or washer. The stepper drivers and brainboard project from the top of the board, making its highest point approx. 0.75" above the bottom of the board. There are no components on the rear side, but the leads of through-hole connectors will protrude about 0.05".

3 External Connections

3.1 24V Power

Nominal 24V power (up to 32V) is supplied through a vertical 2-pin Molex Mini-Fit Jr. connector, the same type used on the brainboards. The upper (longer) pin is ground, and the lower pin is +24V. The power input

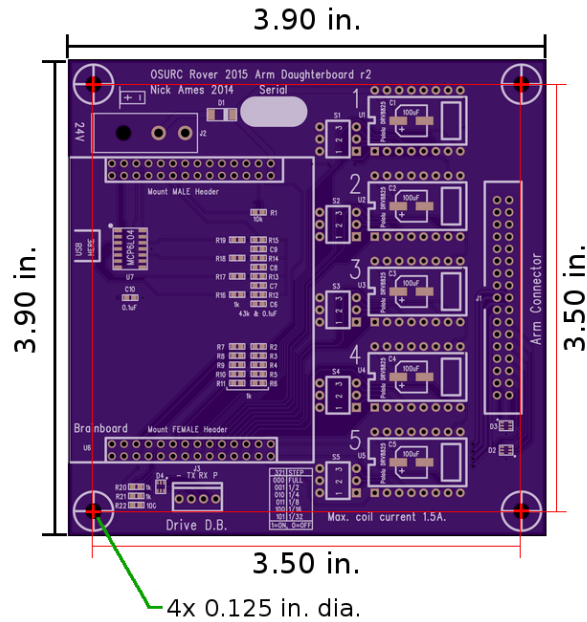


Figure 2: Arm daughterboard PCB dimensions

should be connected to the daughterboard only; the brainboard receives power from the daughterboard. The arm daughterboard can consume a maximum of 4A of current.

3.2 Arm Interface

Stepper 1-A1	1	2	Stepper 1-A2
Stepper 1-B2	3	4	Stepper 1-B1
Stepper 2-A1	5	6	Stepper 2-A2
Stepper 2-B2	7	8	Stepper 2-B1
Stepper 3-A1	9	10	Stepper 3-A2
Stepper 3-B2	11	12	Stepper 3-B1
Stepper 4-A1	13	14	Stepper 4-A2
Stepper 4-B2	15	16	Stepper 4-B1
Stepper 5-A1	17	18	Stepper 5-A2
Stepper 5-B2	19	20	Stepper 5-B1
GND	21	22	Limit 1
GND	23	24	Limit 2
GND	25	26	Limit 3
GND	27	28	Limit 4
GND	29	30	Limit 5
Force 1	31	32	Force 2
Force 3	33	34	Force 4

Connector Parts	
Board Header	Assmann AWP34-7240-T-R (HKC34H-ND)
Wire Connector	Assmann AWHW-34G-0202-T (HRP34H-ND)
Wire	3M 3302/34 300SF (MC34M-5-ND)

Figure 3: Arm connector

3.2.1 Stepper Drivers

The arm daughterboard includes five Pololu DRV8825 stepper driver modules, designated 1-5. Each module has two settings that must be configured: the coil current and the number of microsteps.

Coil current is set using the small trimpot and can be determined by measuring the voltage on the round testpoint near the center of the board. The coil current in amps is equal to twice the test point voltage in volts ($I_{coil} = 2V_{test}$). The maximum allowable coil current is 1.5A. Therefore, the test point voltage should never be set higher than 0.75V. Set the stepper motor current high enough to ensure that steps are never missed, even under maximum speed and the greatest anticipated load.

Microstepping subdivides the physical steps in the stepper motor, allowing smoother movement. The microstep setting of each module is determined by the DIP switch next to it. See table 1 for the settings.

<i>Switches</i>			<i>Microstep Mode</i>
3	2	1	
off	off	off	Full Step
off	off	ON	1/2 (half)
off	ON	off	1/4 (quarter)
off	ON	ON	1/8
ON	off	off	1/16
ON	off	ON	1/32
ON	ON	off	1/32
ON	ON	ON	1/32

Table 1: Stepper driver microstep settings

3.2.2 Limit Switches

Limit switches are provided to allow the robot to home the arm axes when it starts up. There are five limit switches, corresponding to the five axes driven by the stepper motors. Each limit switch pin should be connected to an NC (normally-closed) microswitch, with the other terminal of the switch connected to ground. Unconnected limit switches will be interpreted by the microcontroller as being pressed.

3.2.3 Flex Sensors

To identify when an object is grasped, analog inputs for up to four flex sensors are provided. These are designed to be used with Spectrasymbol flex sensors available from Sparkfun (4.5", 2.2"). Each sensor should be connected between the flex input pin and ground. The resistance of the flex sensors can vary dramatically, so the voltage divider resistors on the PCB may need to be changed.

3.3 Drive Daughterboard Interface


			<i>Connector Parts</i>	
	nPAUSE	(3.3V In)	<i>Board Header</i>	TE 640454-3 (A19430-ND)
	RX	(3.3V In)	<i>Wire Connector</i>	TE 3-643814-3 (A31018-ND)
	TX	(3.3V Out)	<i>Strain Relief</i>	TE 643075-3 (A19231-ND)
	GND	(GND)	<i>Wire</i>	2 twisted pairs from cat-5 cable

Figure 4: Drive daughterboard interface connector

A four-pin connector is provided to receive RC receiver commands and the $\overline{\text{PAUSE}}$ signal from the drive daughterboard. All three signals are 3.3V level.

4 Microcontroller Connections

This section contains the complete microcontroller connection table.

Pin	Interface/Device	Interface Signal
PB3	Stepper Drivers	nFAULT
PE4	Stepper Driver 1	Step
PE7	Stepper Driver 1	Dir
PE5	Stepper Driver 1	nEN
PE3	Stepper Driver 2	Step
PE2	Stepper Driver 2	Dir
PE0	Stepper Driver 2	nEN
PD6	Stepper Driver 3	Step
PE1	Stepper Driver 3	Dir
PD7	Stepper Driver 3	nEN
PD5	Stepper Driver 4	Step
PD4	Stepper Driver 4	Dir
PD2	Stepper Driver 4	nEN
PD1	Stepper Driver 5	Step
PD0	Stepper Driver 5	Dir
PD3	Stepper Driver 5	nEN
PA3/ADCA3	Arm	Force Ch. 1
PA2/ADCA2	Arm	Force Ch. 2
PA4/ADCA4	Arm	Force Ch. 3
PA5/ADCA5	Arm	Force Ch. 4
PF6	Arm	Limit Switch 1
PF7	Arm	Limit Switch 2
PF4	Arm	Limit Switch 3
PF0	Arm	Limit Switch 4
PF1	Arm	Limit Switch 5
PF5	Drive Board Com.	nPAUSE input
PF3/TXF0	Drive Board Com.	TX
PF2/RXF0	Drive Board Com.	RX

Table 3: Microcontroller connections

5 Assembly Notes

5.1 Soldering

The daughterboards are designed to be reflow soldered. Solder paste should be deposited using a kapton stencil ([OSHStencils](#) is an inexpensive source), then surface-mount components should be placed. Next, the solder should be reflowed in an oven. Through-hole parts should be soldered manually.

5.2 Connectors

MTA connectors are insulation-displacement connectors, meaning the wires do not need to be stripped before they are inserted. A special tool (MTA-100: A9982-ND, MTA-156: A9981-ND) is needed to push the wires down into the connector. These tools are a bit expensive, and the business end is quite simple, so we'll probably make our own. In a pinch, a small screwdriver can be used to insert the wires. However, connectors assembled this way should not be used on the robot due to reliability concerns.

Twisted pairs from cat-5 cable are used for the connection to the drive daughterboard. Multiple wires should be bundled together with half-inch pieces of heatshrink tubing every three inches or so.

Ribbon connectors should be assembled using a vise. Line up the ribbon cable in the connector, making sure that the pin one triangle is on the side of the ribbon cable with the brown stripe, and that the cable is exiting from the correct side of the connector. Loosely snap on the retaining clip. Place the part in a vise and tighten the vise to push the retaining clip all the way down. Don't crush the connector.

6 Assembly/Ordering Bill of Materials

(This is a summary bill of materials. For a complete BOM, refer to the design files.)

Qty	RefDes	Description	Digikey Part #	Manufacturer	Part #
5	C1-C5	100uF Capacitor	493-2203-1-ND	Nichicon	UWT1V101MCL1GS
5	C6-C10	0.1uF Ceramic Capacitor	1276-1012-1-ND	Samsung	CL10F104ZB8NNNC
1	D1	Schottky diode	DB2431200LCT-ND	Panasonic	DB2431200L
3	D2-D4	5 Channel TVS Array	ESD5V0S5USE6327INCT-ND	Infineon	ESD5V0S5US E6327
1	J2	2-pin Mini-Fit Jr. Connector	WM7513-ND	Molex	441300018
1	J2	34-position ribbon header	HRP34H-ND	Assmann WSW	AWHW-34G-0202-T
1	J2M	34-position ribbon connector	HKC34H-ND	Assmann WSW	AWP34-7240-T-R
1	J2W	34-wire ribbon cable	MC34M-5-ND	3M	3302/34 300SF
1	J3	MTA-100 4-pin header	A19431-ND	TE	640454-4
1	J3D	MTA-100 4-pos strain relief	A19232-ND	TE	643075-4
1	J3M	MTA-100 4-pin connector	A31019-ND	TE	3-643814-4
1	R1	10k Ohm Resistor	RHM10KCGCT-ND	Rohm	MCR03ERTJ103
4	R12-R14	43k Ohm Resistor	RHM43KCGCT-ND	Rohm	MCR03ERTJ433
20	R2-R21	1k Ohm Resistor	RHM1.0KCGCT-ND	Rohm	MCR03ERTJ102
1	R22	100 Ohm Resistor	RHM100CGCT-ND	Rohm	MCR03ERTJ101
5	SW1-SW5	3-pos DIP Switch	CT2103MS-ND	CTS	210-3MS
5	U1-U5	Pololu DRV8825 Module	-	Pololu	2133
5	U1J-U5J	16-pin DIP Socket, 0.67	A118692-ND	TE	2-382712-1
1	U6	Brainboard Module	-	-	-
2	U6FA-U6FB	14-pin Female Header	-	Generic	-
1	U6M	2x14 Male Header	WM8132-ND	Molex	901310134
1	U7	4 channel, Rail-to-Rail Op-Amp	MCP6L04T-E/SLCT-ND	Microchip	MCP6L04

Table 5: Summary of Assembly/Ordering BOM

7 Schematic

6

5

4

3


2

1

REVISION RECORD			
LTR	ECO NO.	APPROVED:	DATE:



Drive Board Com.

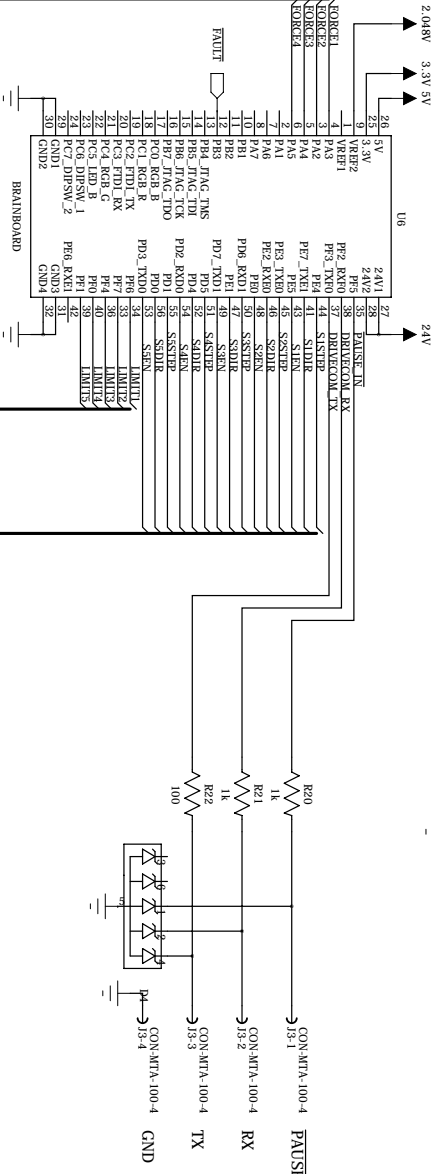


COMPANY:		OSURC Rover 2015	
TITLE:		Arm Daughterboard	
DRAWN: Nick Ames		DATED: Dec. 2014	
CHECKED: <Checked By>		DATED: <Checked Date>	
QUALITY CONTROL: <QC By>		DATED: <QC Date>	
RELEASED: <Released By>		DATED: <Release Date>	
SCALE: <Scale>		SHEET 1 of 3	




From Sheet 3 - Force
FORCE[1:4]

From Sheet 2 - Stepper
LIMIT[1:3]

REVISION RECORD			
LTR	ECO NO.	APPROVED:	DATE:

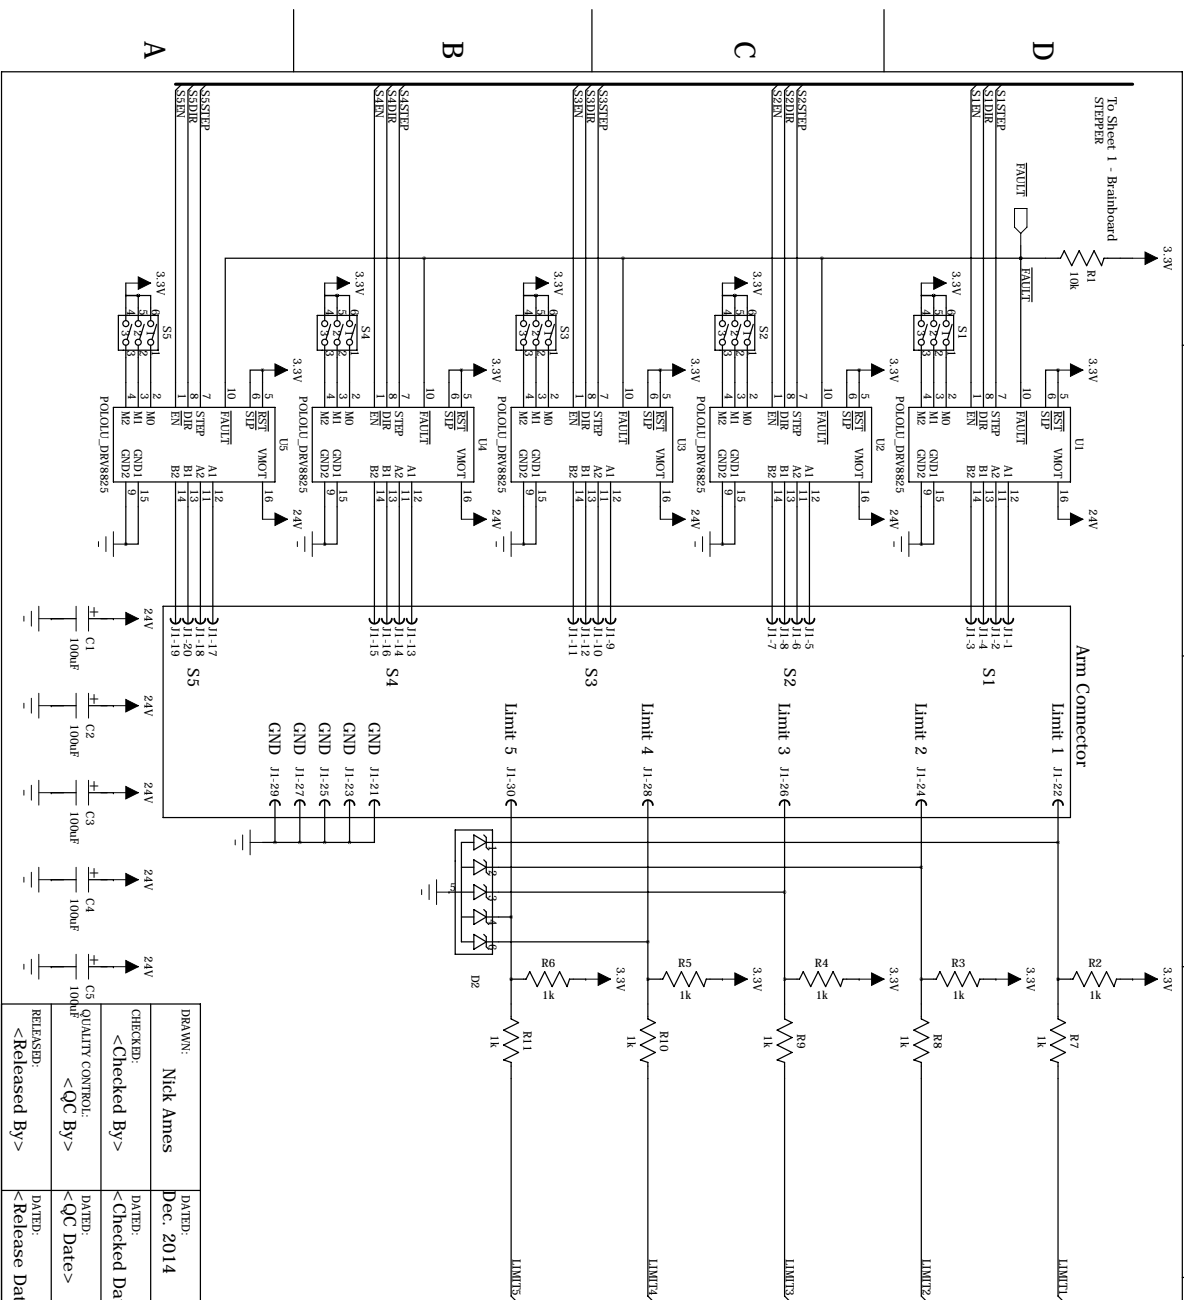

COMPANY:		OSURC Rover 2015		
TITLE:		Arm Daughterboard		
DRAWN: Nick Ames	DATED: Dec. 2014			
CHECKED: <Checked By>	DATED: <Checked Date>	CODE:	SIZE:	DRAWING NO.:
QUALITY CONTROL: <QC By>	DATED: <QC Date>	<Code>	B <Drawing Number>	REV: 1
RELEASED: <Released By>	DATED: <Release Date>	SCALE: <Scale>		SHEET: 20 of 3

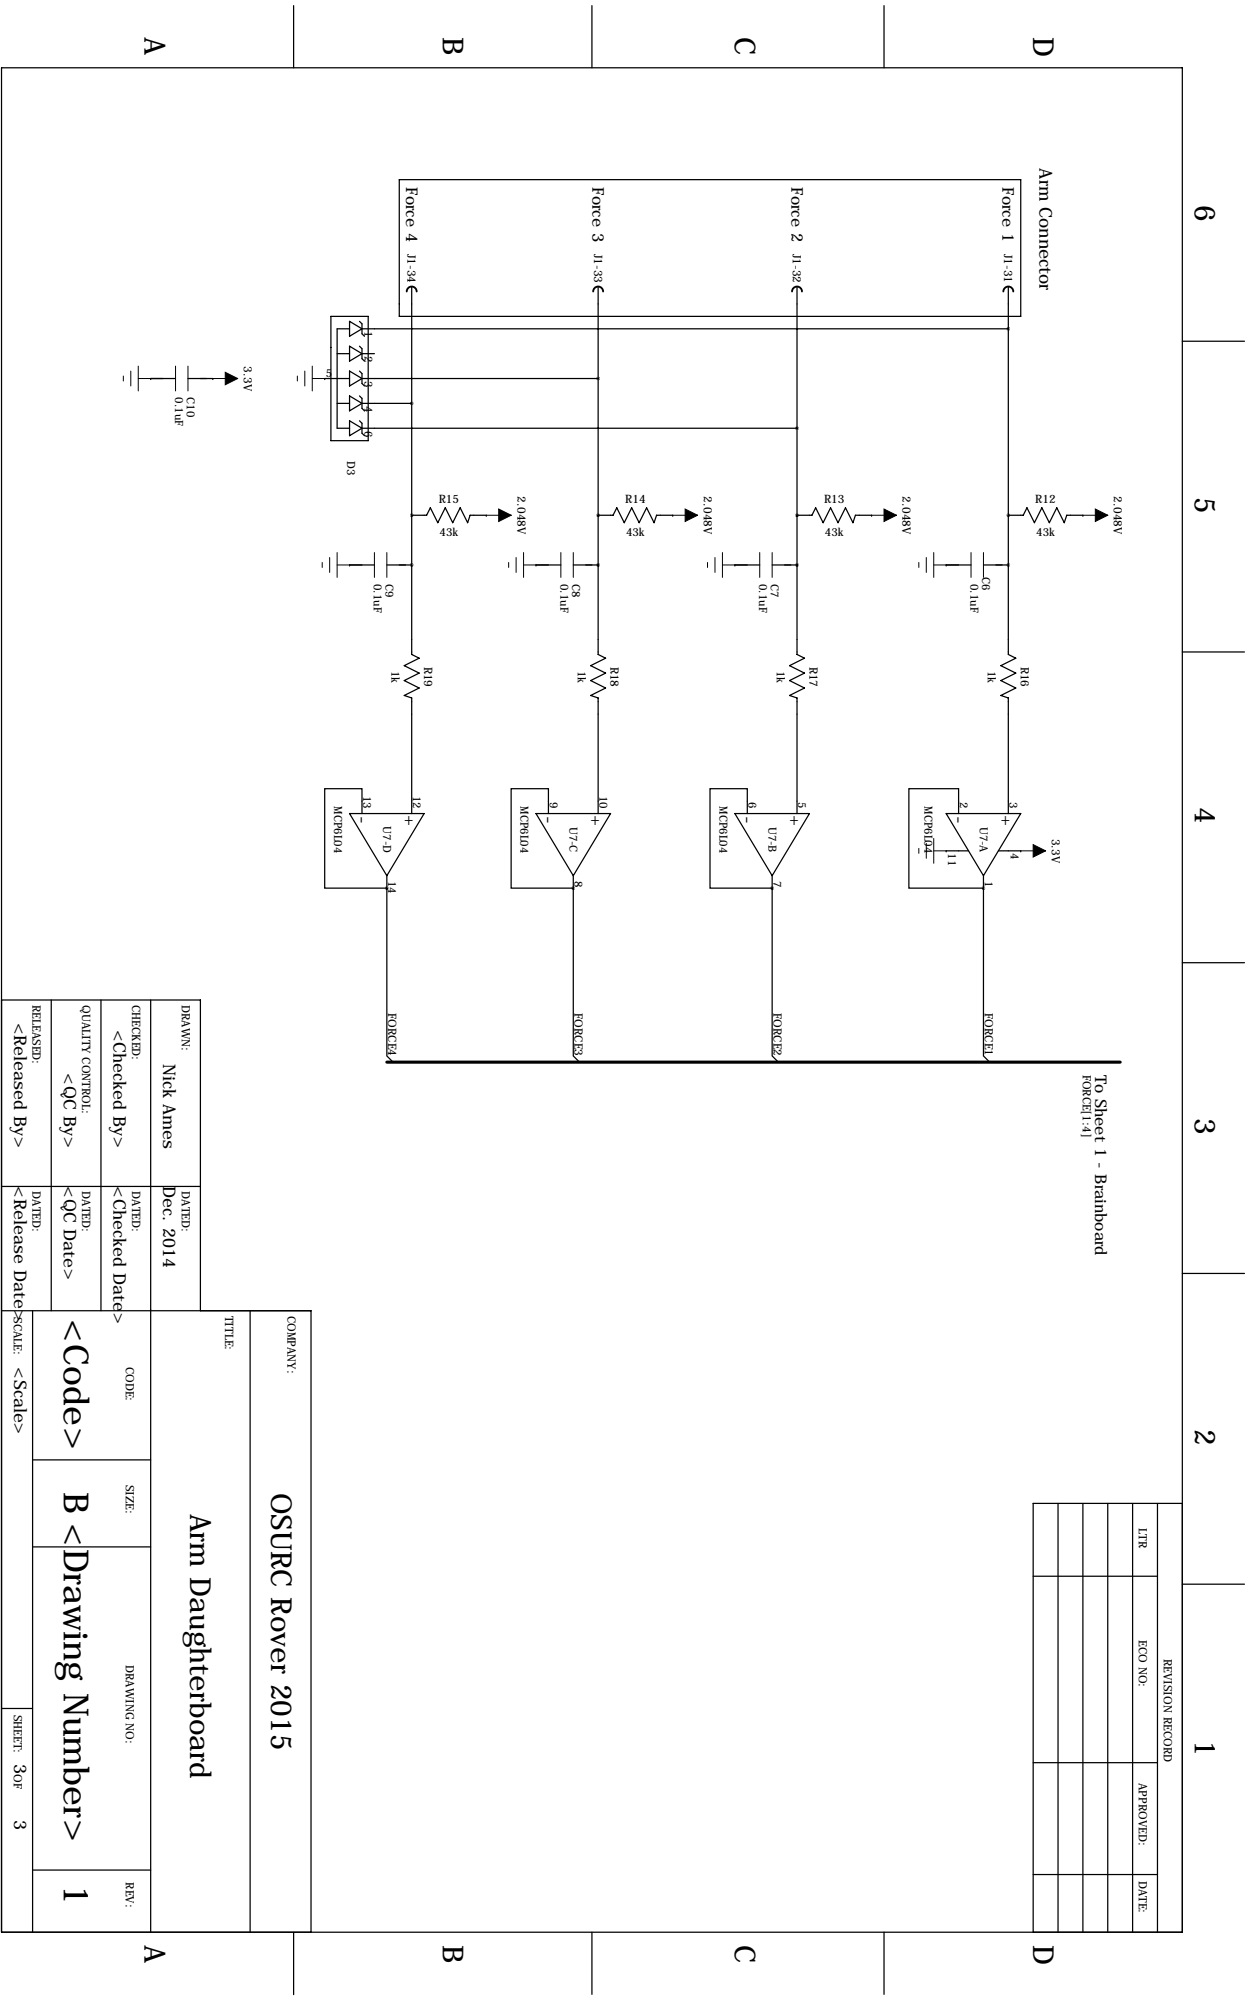

6

5

4

3

2

1

Arm Connector

Force 1 J1-31

Force 2 J1-32

Force 3 J1-33

Force 4 J1-34

2.048V

R12

43k

3.3V

C6

0.1uF

R16

1k

U7-A MCP6004

FORCE1

2.048V

R13

43k

2.048V

C7

0.1uF

R17

1k

U7-B MCP6004

FORCE2

2.048V

R14

43k

2.048V

C8

0.1uF

R18

1k

U7-C MCP6004

FORCE3

2.048V

R15

43k

2.048V

C9

0.1uF

R19

1k

U7-D MCP6004

FORCE4

D8

3.3V

C10

0.1uF

To Sheet 1 - Brainboard

FORCE1-4

COMPANY:

OSURC Rover 2015

TITLE:

Arm Daughterboard

DRAWN: Nick Ames

DATED: Dec. 2014

CHECKED: <Checked By>

DATED: <Checked Date>

QUALITY CONTROL: <QC By>

DATED: <QC Date>

RELEASED: <Released By>

DATED: <Release Date>

CODE

SIZE

DRAWING NO.

REV.

<Code>

B

<Drawing Number>

1

SCALE: <Scale>

SHEET 3of 3